


**Enjoy peace of mind.  
Register your appliance today.**

Stay updated on better living services, safety notices and shop for accessories.

- 1. Open the camera app on your smartphone and point at the QR code to scan**  
Product Registration QR code is located on the front of your appliance or inside the door rim\*.

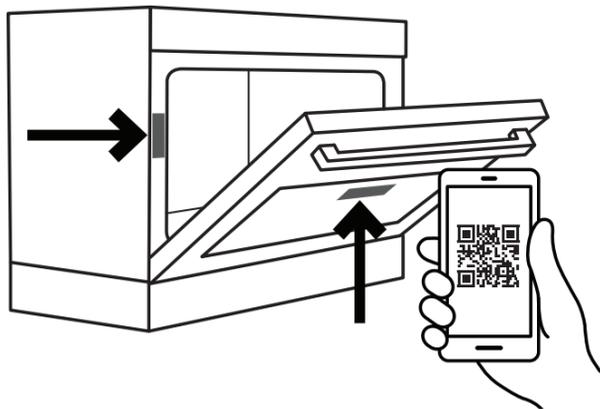

- 2. Tap the notification or link to open the registration form**
- 3. Complete your details and enjoy peace of mind**

\*Exact location of QR code may vary depending on oven model



**Need more help?**

To access your detailed user manual online, simply scan the QR code on your smart phone. If you prefer a printed manual, please contact our Customer Care Centre using details below.



**Contact us if you need more help**

**Electrolux Home Products Australia**  
telephone: 13 13 49  
email: [customercare@electrolux.com.au](mailto:customercare@electrolux.com.au)  
web: [electrolux.com.au](http://electrolux.com.au)

**Electrolux Home Products New Zealand**  
telephone: 0800 436 245  
email: [customercare@electrolux.co.nz](mailto:customercare@electrolux.co.nz)  
web: [electrolux.co.nz](http://electrolux.co.nz)

Dear Customer,

Thank you for purchasing a Westinghouse oven. You have chosen a product that comes from a history of durable and reliable products loved by many families. We look to help you make the most of your time at home, so you can spend your time doing what you really love, with the ones you love.

Welcome to Westinghouse.

**Ready**



**This is a Quick Start Guide. Please refer to user manual online for detailed information and installation**

To access your detailed user manual online, simply scan the QR code on your smart phone.

For more detailed information and installation guide refer to user manuals at [westinghouse.com.au/manuals](http://westinghouse.com.au/manuals)

**Before you start, please make sure:**


- Your oven has been correctly installed by a qualified person.
- Your oven has power and is switched on.
- You've removed all relevant packaging.



Most of the packaging materials can be recycled. Please dispose of them at your local recycling centre or in your own recycling bin.

**Set...**

**Get to know your oven control panel:**

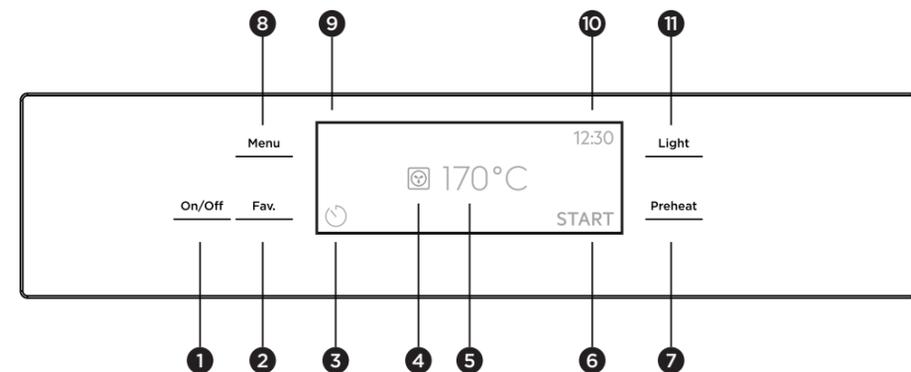

- |   |                               |
|---|-------------------------------|
| <b>1</b> On/off button (Press and hold) | <b>7</b> Preheat button       |
| <b>2</b> Favourite button               | <b>8</b> Menu button          |
| <b>3</b> Timer                          | <b>9</b> Touch screen display |
| <b>4</b> Heating functions              | <b>10</b> Time of day         |
| <b>5</b> Oven temperature               | <b>11</b> Light button        |
| <b>6</b> Start / Stop                   |                               |

# Set...


## Installing the oven accessories

**1. Install telescopic slides (where supplied) to the side racks. Refer to installation guide supplied with oven slides.**

### 2. Insert side racks



There is a left hand and right hand version (see image).

1. Insert the rear peg into the rear access hole, ensuring that the peg is fully inserted.
2. Then locate the front peg into the front access hole and push in firmly.

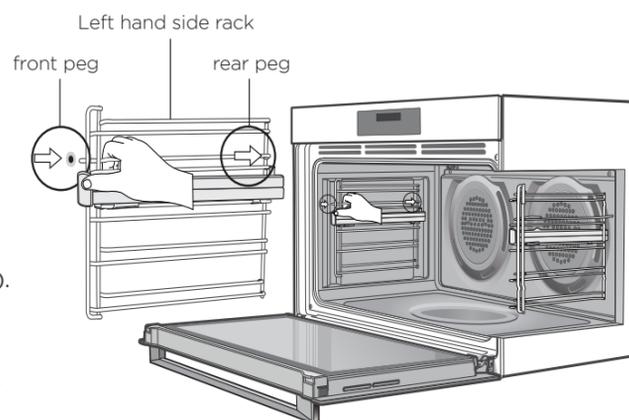



### 3. To fit a shelf or tray to side racks:

1. Locate the rear edge of the shelf in between guide rails of the side rack. Ensure the same rail positions on both sides of the oven are being engaged.
2. With the front edge raised, slide the shelf into the oven.
3. Once the detents have passed the front edge of the side rack, the shelf can be pushed completely in.

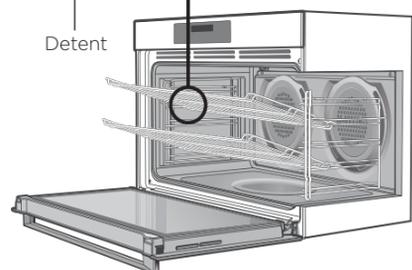
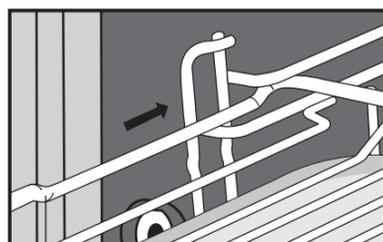


### 4. Fit shelf/tray (where supplied) to telescopic slides

1. Push the shelf or tray along the top of the slide until it hits the back post.

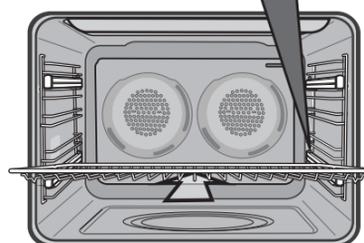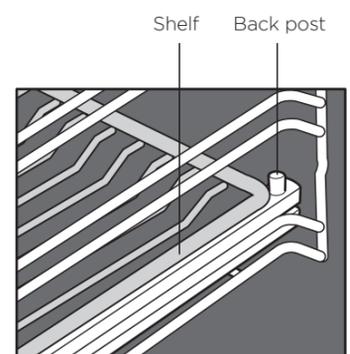


2. Drop the front of the shelf or tray onto the slide ensuring it sits behind the front post of the slide.

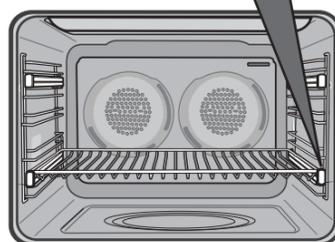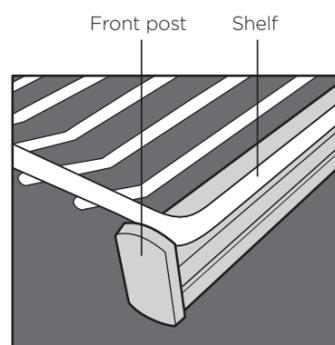

3. When fully inserted the shelf/tray should not interfere with the closed oven door.

## INITIAL OVEN SETUP

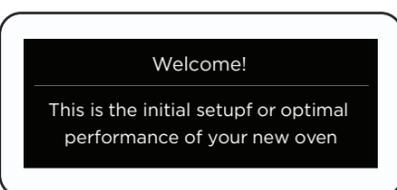

The first time you use your oven, there will be an initial set up required. Follow the steps as prompted in the display to select your preferred options.

### Condition the oven (to burn off any residue)

New appliances can have oil or residue left from manufacturing. You will need to heat your oven for 2 hours before using it for the first time.

1. Press and hold ON/OFF to turn on oven.
2. Press cooking function Icon on the display and select 'Fan Forced' function .
3. Set the temperature to 180C and let the oven to operate for 30 minutes. Please ensure that the room is well ventilated during this process.

# Go!

## You're ready to use your new Westinghouse appliance. A few tips from us:

### Remember to pre-heat each time.

For best cooking results pre-heat the oven. Pre-heating allows the oven to reach the required temperature quickly and efficiently as well as cook food at the correct temperature for the entire cook time. Recommended pre-heat time is 30 mins for baking and 3 minutes for grilling.

### Choose the right program for the best result:

#### FAN FORCED



This setting is best used when cooking on multiple shelves at once or reheating complete meals for your family.

#### BAKE



The "Bake" function is ideal for a single tray of biscuits, scones, muffins, cakes, slices, casseroles, baked puddings, roasts and delicate egg dishes.

#### FAN ASSIST



Heat comes from above and below the food, and fans circulate the hot air around the oven cavity so you can put the food in different places in the oven and cook them at the same time. Use a maximum of 2 shelves with "Fan Assist", but not the bottom shelf. If two shelves are used, food on the shelf in the higher position will be ready first.

#### PIZZA



The "Pizza" function is ideal for foods that require cooking and browning on the base. It is great for foods such as pizzas, quiches, meat pies and fruit pies. Simply place the food in the middle of the oven and set the desired temperature.

#### AIR FRY



Air Fry uses superheated air that is quickly and evenly circulated around the oven to deliver that crispy-on-the-outside, juicy-on-the-inside taste with little or no oil.

#### EASY BAKE STEAM



The "Easy Bake Steam" function adds steam while baking. Steam assisted baking helps the dough to rise, and consistently produces soft, moist interiors with crisp, golden crusts. Add water to the cavity well before preheating, while the oven is cold.

Refer to your full user manual for more details on oven functions.

### Set your temperature

1. To set the temperature, touch displayed temperature and swipe left or right until you reach your desired temperature setting.
2. Touch OK to confirm your desired temperature and then press 'Start' to start cooking.