






## **Verticals & Pigeon Pairs**

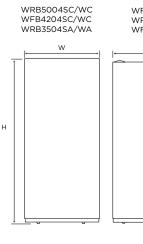

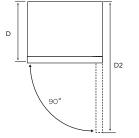

WFB2804SA/WA WRM2400WE WFM1700WE



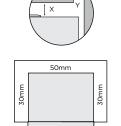

Front face of bench aligned to front corner edge of cabinet.

Minimum Recommended Airspaces

If you have a cupboard above the refrigerator with a rear gap of less than 100mm (Y), recommended minimum clearance at the top of the refrigerator increases from 30mm to 70mm (X).

**Please note:** Doors are designed to sit proud of cabinetry (not flush).

When positioned in a corner area, clearance of at least 350mm on the hinge side will allow the doors to open enough to enable the removal of the bins and shelves<sup>\*</sup>.

Dimensions	Product Height (H)	Product Width (W)	Product Depth (D)	Product Depth (D2) (Door Open)
WRB5004SC/WC	1725	699	641	1360
WFB4204SC/ WC	1725	699	769	1360
WRB3504SA/ WA	1746	595	700	1175
WFB2804SA/ WA	1746	595	700	1175
WRM2400WE	1434	550	545	1050
WFM1700WE	1434	550	560	1065

Airspace	Side - both	Тор	Behind
WRB5004SC/WC	30	30	50
WFB4204SC/WC	30	30	50
WRB3504SA/ WA	30	30	50
WFB2804SA/ WA	30	30	50
WRM2400WE	30	30	50
WFM1700WE	30	30	50

## IMPORTANT

These dimensions are a guide only. All measurements are in millimetres (mm). For complete installation instructions, refer to the manual provided with product. © 2021 Electrolux Home Products Pty Ltd. ABN 51 004 762 341. W\_DIM\_SD\_Oct21